

HDC6 Contacteurs AC

Informations à la commande



Désignation	Calibre courant	Contacts auxiliaires	Tension bobine	Fréquence bobine
HDC6	09	11	M	
	↓	↓	↓	↓
	09:9A ... 630:630A	11:1NO+1NF 00:0NO+0NF	B:24V ... X:440V	Par Défaut: 50HZ 7:50/60HZ

AC-3, 380/400V		Contacts auxiliaires		Référence
Calibre courant (A)	Calibre puissance (KW)			
9	4	1	1	HDC6 09 11*.
12	5.5	1	1	HDC6 12 11*.
18	7.5	1	1	HDC6 18 11*.
25	11	1	1	HDC6 25 11*.
32	15	1	1	HDC6 32 11*.
40	18.5	1	1	HDC6 40 11*.
50	22	1	1	HDC6 50 11*.
65	30	1	1	HDC6 65 11*.
80	37	1	1	HDC6 80 11*.
95	45	1	1	HDC6 95 11*.
115	55	-	-	HDC6 115 00*.
150	75	-	-	HDC6 150 00*.
185	90	-	-	HDC6 185 00*.
225	110	-	-	HDC6 225 00*.
265	132	-	-	HDC6 265 00*.
330	160	-	-	HDC6 330 00*.
400	200	-	-	HDC6 400 00*.
500	250	-	-	HDC6 500 00*.
630	335	-	-	HDC6 630 00*.

Note: "**" Code tension bobine " " code fréquence **bobine**

Tableau des tensions bobine

Tension bobine (V)	24	36	48	110	127	220	230	240	380	400	415	440
50HZ	B	C	E	F	S	M	-	-	Q	V	L	X
50/60HZ	B7	-	E7	F7	-	M7	N7	U7	Q7	V7	-	-

Note: 115-630AF fait référence à la situation actuelle.

