


TIP CLEANERS

C-9 Standard calibrated tip cleaner


CLEANING INSTRUCTIONS: Care should be taken not to be too aggressive when cleaning tips. Always use the proper size tip cleaner and be careful not to enlarge or distort the original tip bore size.

E-9 Two-piece and divergent bore calibrated tip cleaner

CLEANING INSTRUCTIONS: The wire brush included with tip cleaner E-9 should be used for cleaning preheat slots and for removing spatter from the tip face. When cleaning the preheat slots, do not brush across the slots as this motion can damage the slots. Always brush along the length of the slot to remove dirt or spatter.

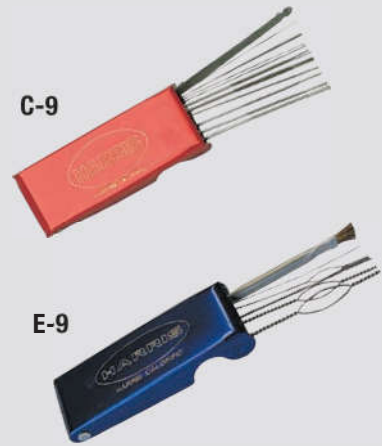

HOSE CONNECTORS

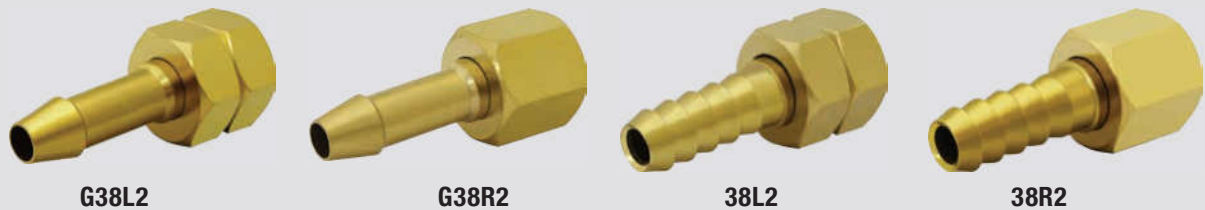

PART NO.	DESCRIPTION	
	NUT	NIPPLE
G38L2	1/4" LH	8 mm
G38R2	1/4" RH	8 mm
G38L4	1/4" LH	6 mm
G38R4	1/4" RH	6 mm
S38L2	3/8" LH	8 mm
S38R2	3/8" RH	8 mm
E38L4	3/8" LH	6 mm
E38R4	3/8" RH	6 mm
38L2	9/16" LH	8 mm
38R2	9/16" RH	8 mm
38L3	9/16" LH	6 mm
38R3	9/16" RH	6 mm
F38L5	M16 x 1.5 LH	8 mm
F38R5	M16 x 1.5 RH	8 mm
F38L4	M16 x 1.5 LH	6 mm
F38R4	M16 x 1.5 RH	6 mm
38L1	9/16" LH	9,5 mm (3/8") hose
38R1	9/16" RH	9,5 mm (3/8") hose