

W4


PSS

COLLIER DE SERRAGE BANDE PERFOREE 8 OU 13 MM

WORM DRIVE HOSE CLAMPS PERFORATED BAND 8 OR 13 MM

SCHNECKENGEWINDESCHELLEN PERFORIERTES BAND 8 ODER 13 MM

ABRAZADERA SIN FIN, CINTA PERFORADA DE 8 O 13 MM

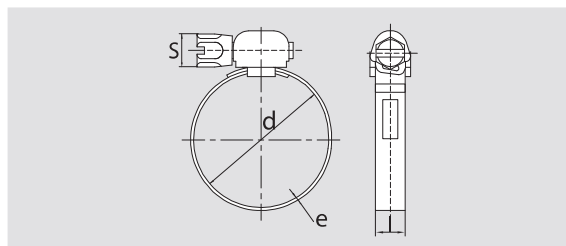

d	Code	s	e	l	Cond.	kg/100
8-12	PSS8 8-12	6,4	0,53	8,15	50	0,680
10-16	PSS8 10-16	6,4	0,63	8,15	50	0,700
14-24	PSS8 14-24	6,4	0,63	8,15	50	0,840
18-28	PSS8 18-28	6,4	0,63	8,15	50	0,890
24-36	PSS8 24-36	6,4	0,63	8,15	25	0,980
25-45	PSS8 25-45	6,4	0,63	8,15	25	1,100
32-52	PSS8 32-52	6,4	0,63	8,15	25	1,220
40-60	PSS8 40-60	6,4	0,63	8,15	25	1,340
47-67	PSS8 47-67	6,4	0,63	8,15	25	1,460
62-82	PSS8 62-82	6,4	0,63	8,15	25	1,580
14-22	PSS13 14-22	8	0,63	12,85	25	1,840
18-28	PSS13 18-28	8	0,63	12,85	25	1,940
24-36	PSS13 24-36	8	0,63	12,85	25	2,040
25-45	PSS13 25-45	8	0,63	12,85	25	2,280
32-52	PSS13 32-52	8	0,63	12,85	25	2,420
40-60	PSS13 40-60	8	0,63	12,85	10	2,600
47-67	PSS13 47-67	8	0,63	12,85	10	2,760
62-82	PSS13 62-82	8	0,63	12,85	10	3,060
77-97	PSS13 77-97	8	0,63	12,85	10	3,260
92-112	PSS13 92-112	8	0,63	12,85	10	3,500
107-127	PSS13 107-127	8	0,63	12,85	10	3,700
122-142	PSS13 122-142	8	0,63	12,85	10	3,860
137-157	PSS13 137-157	8	0,63	12,85	10	4,000
152-172	PSS13 152-172	8	0,63	12,85	10	6,400
167-187	PSS13 167-187	8	0,63	12,85	10	7,000
188-202	PSS13 188-202	8	0,63	12,85	10	8,000
197-217	PSS13 197-217	8	0,63	12,85	10	9,000
212-232	PSS13 212-232	8	0,63	12,85	10	10,000
227-247	PSS13 227-247	8	0,63	12,85	10	11,000



Couple de serrage recommandé / recommended torque :

PSS8 = 2,8Nm ;

PSS13 du 14-22 à 18-28 = 4Nm et du 24-36 à 227-247 = 5Nm

