



12X7; 16X10; 20X12,5; 25X16; 32X12,5; 32X16; 40X12,5; 40X16; 40X25; 60X16; 50X20; 75X20; 110X20

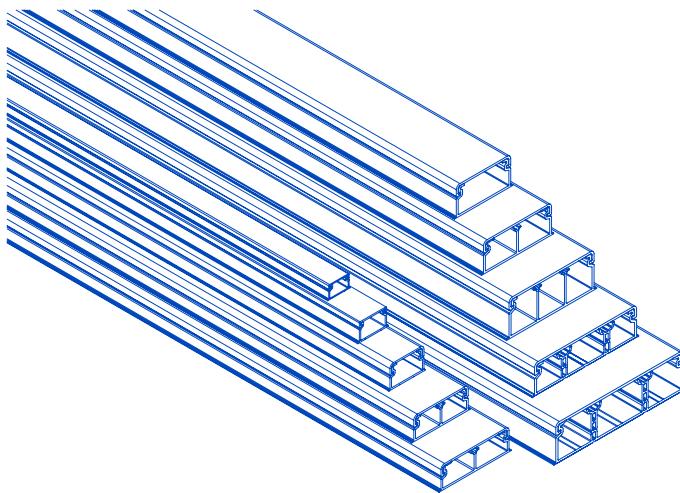

# SCHÉMA DE MONTAGE DE ACCESSOIRES I

# MONTAGEANLEITUNG FÜR ZUBEHÖR I ДЕМОНТАЖ МОДУЛЬНОГО СУППОРТА

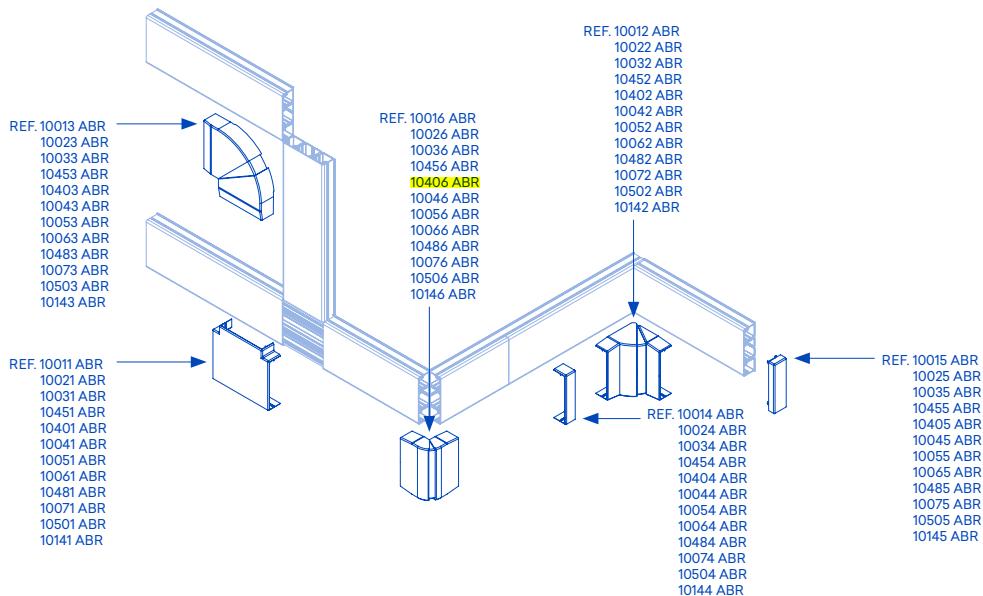

REF.	(MM)	IK
10010 CBR	12x7	05
10010 FBR		
10020 CBR	16x10	07
10020 FBR		
10030 CBR	20x12,5	07
10030 FBR		
10450 CBR	25x16	07
10450 FBR		
10400 CBR		
10400 FBR		
10410 CBR	32x12,5	07
10410 FBR		
10040 CBR	32x16	07
10040 FBR		
10050 CBR		
10050 FBR		
10150 CBR	40x12,5	07
10150 FBR		
10060 CBR		
10060 FBR		
10160 CBR	40x16	07
10160 FBR		
10480 CBR	40x25	07
10070 CBR	60x16	07
10170 CBR		
10500 CBR		
10510 CBR	50x20	07
10520 CBR		
10140 CBR	75x20	07
10100 CBR	110x20	05